

Premium Cool Aire® 4

Nozzles for
Larger Latex

Nozzles for
5" Latex



Two Hands-Free
Foot Pedals

Designed for mass Inflation of latex balloons with 4-nozzles.

- ▶ Three "Speed-Switch" settings for high pressure for small latex down to low pressure for large latex.
- ▶ Inflates 1, 2, 3 or 4-balloons at one time, when using the supplied nozzle caps to close off "un-used" nozzles for faster inflation.
- ▶ Comes with set of Nozzles for different shapes and sizes of balloons. (Nozzles can also be purchased separately)

Air	Gas	Inflation Outlets	Large Latex	5"	160	260	350	Foil	Orbz/ Bubble
✓		4	✓	✓	✓	✓	✓		✓


CE UK
CA



www.premiumballoon.com

Cool Aire® 4 Balloon Inflator

by

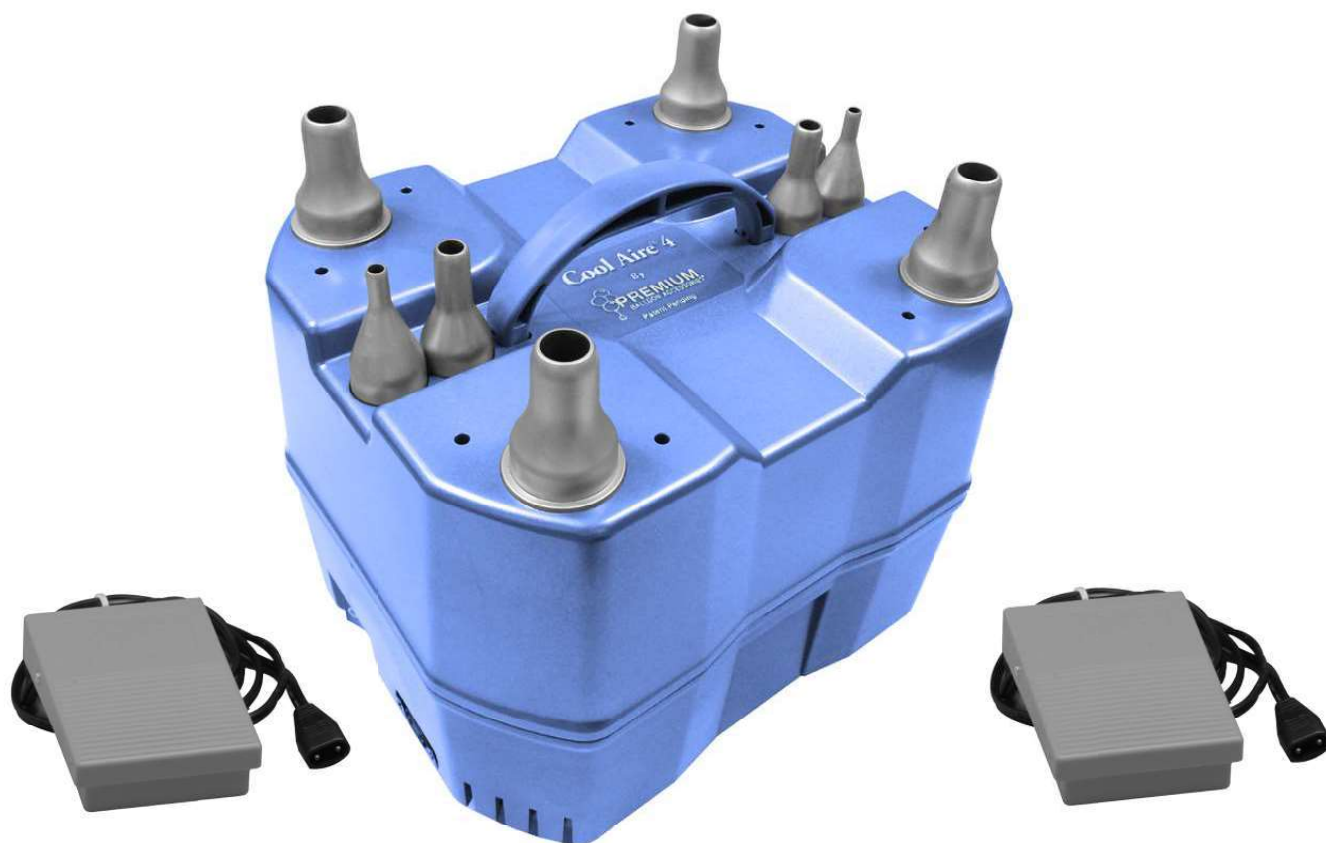

Congratulations on your purchase of this Cool Aire® 4 Balloon Inflator. This machine incorporates Premium's superior quality and technology to provide an affordable, electric inflator, designed to provide years of trouble free inflation.

This booklet contains:

- *Operating Instructions*
- *Safety Instructions*
- *Registration & Warranty Information*

Please read carefully, register your Cool Aire® 4 Balloon Inflator, and keep booklet in a safe place.

www.premiumballoon.com

English

The Cool Aire® 4 Inflator was designed for mass inflation of latex balloons for balloon drops, arches, etc., and incorporates Premium's 'Cool Aire Technology'. It has 4-nozzles for 2-person use to maximize inflator operation and inflates 2 or 4-balloons at one time. Two foot pedals are included for dual, hands-free inflation and the Cool Aire 4 unit has a power "Booster- Switch" for its 3-speed motor, for fast, efficient inflation. The Cool Aire® 4 is available in 120-volt and 230-volt versions for Europe, UK and Australia. Pending approvals include CE for Europe, CSA for Canada and UL for the USA.

OPERATING INSTRUCTIONS

1. Plug your Cool Aire® 4 Inflator into wall socket and position machine on a flat, level, dry surface.
2. The Cool Aire® 4 was designed primarily to inflate latex balloons, 7" or 17.5cm and larger.
3. The unit comes with two foot pedals for hands-free inflation.
4. If only one person is operating the machine using only two of the four nozzles for inflation, put the smallest latex reducer on the two unused inflation nozzles to restrict the air flow. This will help increase the inflation pressure on the two nozzles used for inflation.
5. Never block the air inlet vents. Do not block air outlet except for normal balloon inflation usage.
6. Your Cool Aire® 4 includes 'Premium's Cool Aire Technology', which will keep the machine from overheating under normal use, but it does come with internal thermal protection. If somehow the machine overheats, the thermal protection will shut it off to protect the motor from damage until it cools down. Turn the power switch off for approximately 20-minutes to allow the machine to cool down or reset. To reduce the reset time, unplug the machine, and move it to a cool, dry location with air movement.
7. Although all motors are thoroughly tested at our manufacturing facility, heavy use will cause further curing of the motor windings. This curing gives off a burning smell and is typical for wound motors. This smell will quickly dissipate after a few heavy uses.

Available models of Cool Aire® 4 include 120-volt units for the North American market, carrying the CSA mark, and 230-volt units for the European market, carrying the CE mark. (Others may be available upon request.)

SAFETY INSTRUCTIONS

1. **Warning** – To prevent fire or shock. **Do Not** expose unit to water or moisture.
2. **Warning - Do Not** place hands, face, or any other objects over the inflation nozzle air discharge hole.
3. **Warning** – **Do Not** obstruct the inflation nozzle in any way or the air intake and discharge vents located at the bottom of the inflator.

SAFETY INSTRUCTIONS cont...

4. To reduce risk of electric shock, unplug inflator before any external cleaning.
5. **Do Not** operate unit with damaged cord or plug. If power cord is damaged, it should only be replaced by authorized service personnel.
6. Make sure cord is situated so that it will not be stepped on, tripped over, or subject to damage or stress.
7. Operate your Cool Aire® 4 Inflator only on a flat, level, dry surface.

Premium Balloon Accessories® (PBA) One (1) Year Conditional Warranty (Subject to proper, intended use)

In order to 'activate your warranty' you must register your Cool Aire® 4 at www.premiumballoon.com

The Cool Aire® 4 was designed by, and manufactured for Premium Balloon Accessories® (PBA), under Exclusive License, and is warranted against defects in material and workmanship for one year following the date of purchase if operated in accordance with PBA's printed recommendations and instructions. This warranty does not cover any defects or damages caused by unauthorized service or repair, or by damage to the Cool Aire® 4 from misuse or abuse.

If the Cool Aire® 4 housing has been opened, it will automatically void the warranty.

PBA SHALL NOT IN ANY EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, WHETHER FOR BREACH OF WARRANTY OR ANY OTHER REASON.

If your Cool Aire® 4 is defective under warranty guidelines during the warranty period, please visit www.premiumballoon.com and double click the Inflator Warranty Option and view PBA's trouble shooting tips. If this does not resolve the problem, complete the online service request information form to receive a **Return Authorization Number**. If you do not have internet access, contact PBA in the U.S.A. at +1-330-239-4547 or fax to +1-330-239-4488. To receive your Return Authorization Number please have the following information ready when contacting PBA:

- Date of Purchase
- Name and contact info for PBA Distributor where the unit was purchased
- Cool Aire® 4 Inflator serial number
- Exact details of Cool Aire® 4 Inflator problem

IMPORTANT:

All products returned to PBA – for warranty repair – will not be accepted without a valid PBA Return Authorization Number.