

Premium MicroAir®



Small and Economical!

- ▶ Includes Premium's "Push-Down" nozzle activated switch for momentary operation.
- ▶ Includes Foil Nozzle Adaptor.

Air	Gas	Inflation Outlets	Large Latex	5"	160	260	350	Foil	Orbz/ Bubble
✓		1	✓				✓	✓	✓

CE UK CA



www.premiumballoon.com

MicroAir® Balloon Inflator

by



Congratulations on your purchase of this MicroAir® Balloon Inflator. This machine incorporates Premium's superior quality and technology to provide an affordable, electric inflator, designed to provide years of trouble free inflation.

This booklet contains:


- *Operating Instructions*
- *Safety Instructions*
- *Registration & Warranty Information*
- *Inflators Offered By Premium*

www.premiumballoon.com

The MicroAir® Inflator was designed to be a powerful, compact, high-quality air inflator that is very affordable, especially for inflating latex balloons. It was designed with a very small but powerful motor, Premium's nozzle activated switch, normal On/Off rocker switch and convenient cord wrap utilizing the Easy-Carry Handle.

OPERATING INSTRUCTIONS

1. Plug your MicroAir® Inflator into wall socket and position machine on a flat, level, dry surface.
2. The MicroAir® was designed primarily to inflate latex balloons, and its nozzle-activated switch is designed to fit small to large latex without the need for special nozzle reducers. All latex balloons, from 7" to 14" or 17.5cm to 35cm - except modeling balloons, can be directly inflated without the use of nozzle reducers.
3. When using the MicroAir® Inflator, continuous operation can be performed by the use of the 2-way On/Off rocker switch. Momentary operation can be performed by simply depressing the nozzle-activated switch.

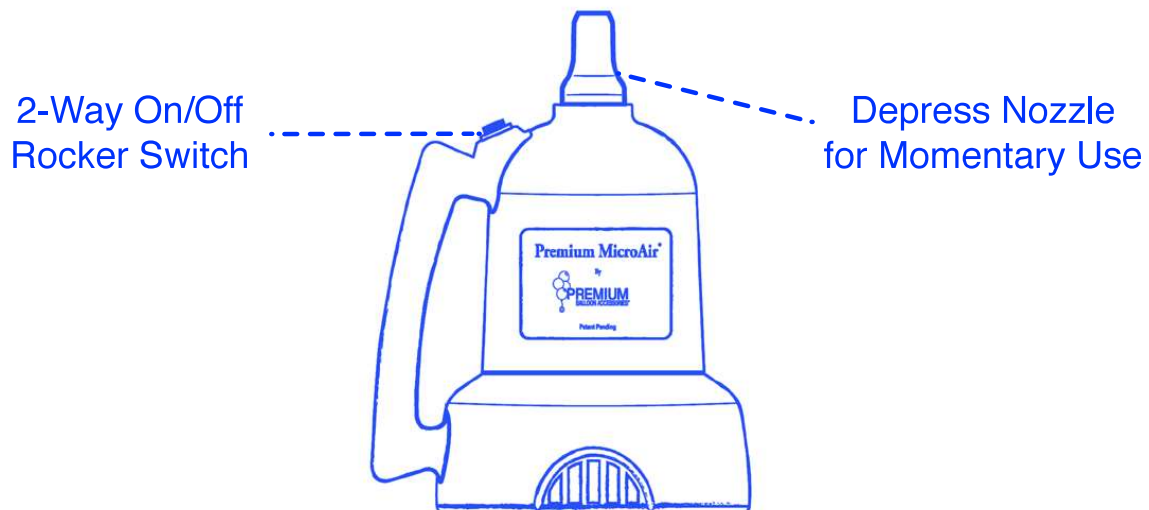

4. Never block the air inlet vents. Do not block air outlet except for normal balloon inflation usage.
5. Never use the MicroAir® for more than 30-minutes continuously and turn it off for 10 minutes for cooling after each 30-minute operating period.
6. Your MicroAir® comes with internal thermal protection. If the machine overheats, the thermal protection will shut it off to protect the motor from damage until it cools down. Turn the power switch off for approximately 20-minutes to allow the machine to cool down or reset. To reduce the reset time, unplug the machine, and move it to a cool, dry location with air movement.
7. Although all motors are thoroughly tested at our manufacturing facility, heavy use will cause further curing of the motor windings. This curing gives off a burning smell and is typical for wound motors. This smell will quickly dissipate after a few heavy uses.

Available models of MicroAir® include 120-volt units for the North American market, carrying the CSA mark, and 230-volt units for the European market, carrying the CE mark. (Others may be available upon request.)

SAFETY INSTRUCTIONS

1. **Warning** – To prevent fire or shock. **Do Not** expose unit to water or moisture.
2. **Warning - Do Not** place hands, face, or any other objects over the inflation nozzle air discharge hole.
3. **Warning** – **Do Not** obstruct the inflation nozzle in any way or the air intake and discharge vents located at the bottom of the inflator.
4. To reduce risk of electric shock, unplug inflator before any external cleaning.
5. **Do Not** operate unit with damaged cord or plug. If power cord is damaged, it should only be replaced by authorized service personnel.
6. Make sure cord is situated so that it will not be stepped on, tripped over, or subject to damage or stress.
7. Operate your MicroAir® Inflator only on a flat, level, dry surface.

Premium Balloon Accessories® (PBA) One (1) Year Conditional Warranty (Subject to proper, intended use)

In order to ‘activate your warranty’ you must register your MicroAir® at www.premiumballoon.com

The MicroAir® was designed by, and manufactured for Premium Balloon Accessories® (PBA), under Exclusive License, is warranted against defects in material and workmanship for one year following the date of purchase if operated in accordance with PBA’s printed recommendations and instructions. This warranty does not cover any defects or damages caused by unauthorized service or repair, or by damage to the MicroAir® from misuse or abuse.

If the MicroAir® housing has been opened, it will automatically void the warranty.

PBA SHALL NOT IN ANY EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, WHETHER FOR BREACH OF WARRANTY OR ANY OTHER REASON.

If your MicroAir® is defective under warranty guidelines, please contact the Distributor where the MicroAir® was purchased. They will arrange a replacement, as long as the problem is not caused by physical damage, and/or improperly attempted repair by unauthorized personnel.

Please advise them regarding the following information:

- Date of Purchase
- MicroAir® Inflator serial number
- Exact details of product problem



www.premiumballoon.com